

### Batteries

1. The Remote Transmitter uses 3 AAA-size batteries. Replace these batteries at least once a year.
2. The Remote Receiver uses 4 AA-size batteries. Replace these batteries at least once each ½ year or when the low battery indicator flashes.
3. After you take out the batteries, wait for at least 1 minute before putting fresh batteries into the Remote Transmitter/Receiver.
4. Use only fresh alkaline batteries

## For initial Start up

1. Put Receiver into the **REMOTE** position. Then put the 4 AA size batteries into the **RECEIVER first**, then put 3 AAA size batteries into the remote **TRANSMITTER** after this you will notice the room temperature flashing on the Transmitter, push the **on** button and you will hear an audible beep from the receiver. If you don't hear the beep, repeat this process.

### Putting in or Changing Batteries

1. Slide the slide switch on receiver to Off position.
2. Press the battery compartment slightly into the Remote Receiver and then release. The battery compartment will pop out of the Remote Receiver. Figure 1.
3. Slide open the battery door and replace batteries.
4. Replace the battery door and slide the battery compartment back into the Remote Receiver.
5. On the transmitter slide off battery door and put in or replace batteries.
6. Replace the battery door.

### IMPORTANT SAFETY FEATURE

You can set a private code into your system to prevent accidental operation by any other transmitter nearby. See Figure 2.

### Coding Instructions

Remove the cover on the back of the Remote Transmitter and expose the code switches. Slide the code switches to your choice of ON or OFF position. **FACTORY SETTING IS ALL "OFF"**.

There are no code switches on the Remote Receiver. These units are self matching and no code changes are needed for the receiver.

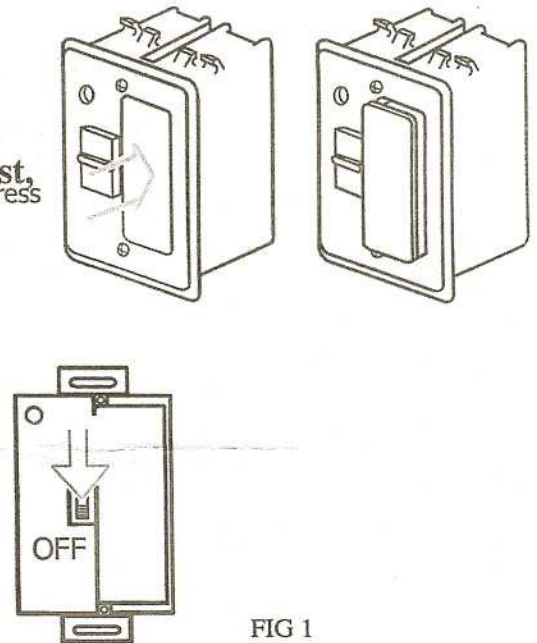


FIG 1

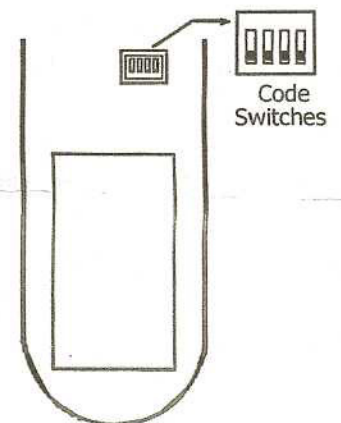


Figure 2